




# Grease Level Alarm Reset Procedure

1. Verify that your machines four grease canisters (one on each side of Y axis and two above the head of the machine) have been replaced before proceeding.
  - o To order grease canisters or parts please email: [PARTS@SASSO-USA.COM](mailto:PARTS@SASSO-USA.COM)




WARNING! Do not reset your timer without replacing your grease canisters or verifying they are full.

2. From the home screen click F9

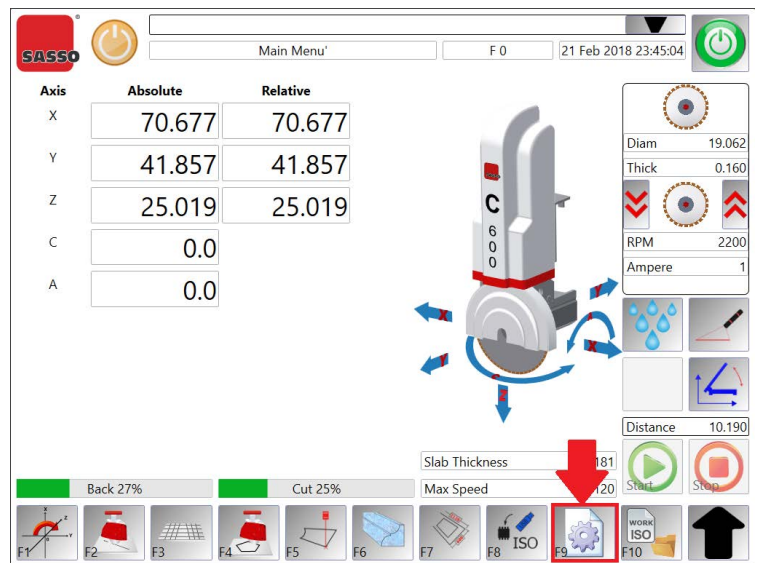

3. Click F2, Then Enter PASSWORD: 0546, scroll to the bottom and find, *month and year of grease control*

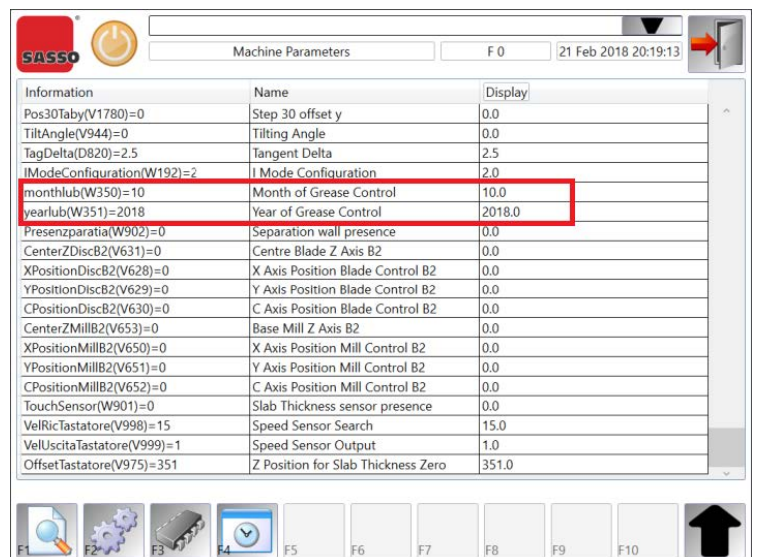

4. Set these values to 12 months from the date the new grease canisters were installed