


Symptom: Water not turning off, or sometimes not turning on.

- Locate water valve on the same side as the electrical cabinet and then disconnect Air from machine.



1. Using a small flat head screw driver, push on the green PushLoc fitting to release the black solenoid and relay.

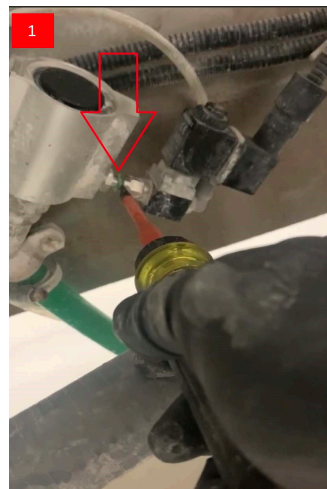


2. Then pull both the solenoid and relay away from the valve.




3. Unscrew Air Fitting from Valve




4. If needed, unscrew clamp to release valve assembly.

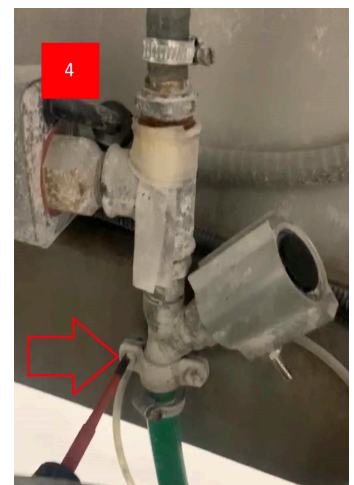

5. Unscrew Valve, we used Channel-locks to break it loose and unscrew the Valve.

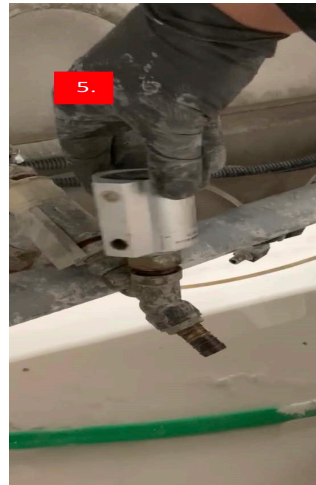

6. Remove Valve from Valve Housing.

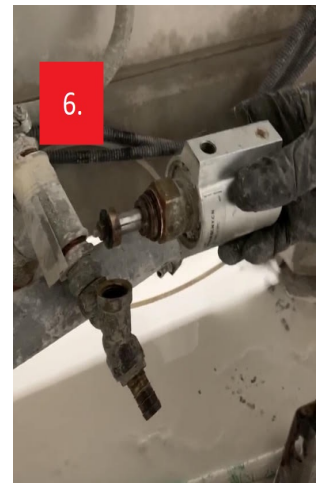

7. Inspect Valve Seat for Damage (the one shown in the picture is normal and ok.)



8. Inspect Valve Body for debris (most common problem). Remove debris and clean body before reassembly.



Reassemble and test